 
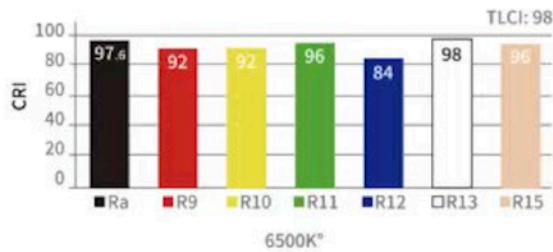 


specs

light source: WW-CW LED
 CCT: 2700K-6500K
 illuminance: I14td 0.5m 4300lux/1m 1435lux/2m 446lux
 I18td 0.5m 4730lux/1m 2060lux/2m 713lux
 wattage: I14td 100W
 I18td 200W
 diffusion angle: 210degrees
 color rendition: CRI98
 balloon diameter: 225mm
 balloon length: 1200mm

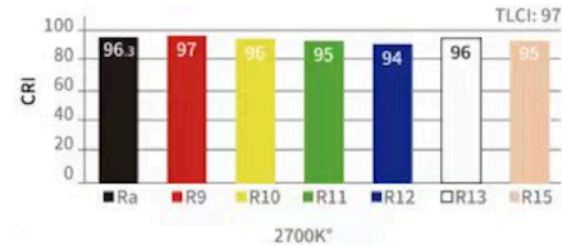

Safety Notices

1. Please use only in environment between -10 and 40 degrees Celsius.
2. Please only use fixture with the controller in the kit and according to the manual within the range of compatible voltage and temperature, failure to do so might cause damage to the fixture.
3. This product is not water proof. Please beware in case of rain or damp environment.
4. Please do not use near chemical hazard, inflammable gas or other dangerous matter as it may cause potential fire or electromagnetic interference. Please be ware of warning signs in situations that may apply.


packaging list

- | | | | |
|---------------------------|----|--|--|
| ① lighting balloon | x1 |  |  |
| ② controller | x1 | | |
| ③ 7m controller cable | x1 |  |  |
| ④ 3m power cable | x1 |  | |
| ⑤ light-controlling skirt | x1 | | |
| ⑥ Velcro handle | x1 |  |  |
| ⑦ shoulder strap | x1 | | |
| ⑧ mounting bracket | x1 |  |  |
| ⑨ air pump | x1 | | |
| ⑩ safety case | x1 |  | |

FLYNOODLE[®] Air Light User Manual



 connecting instructions

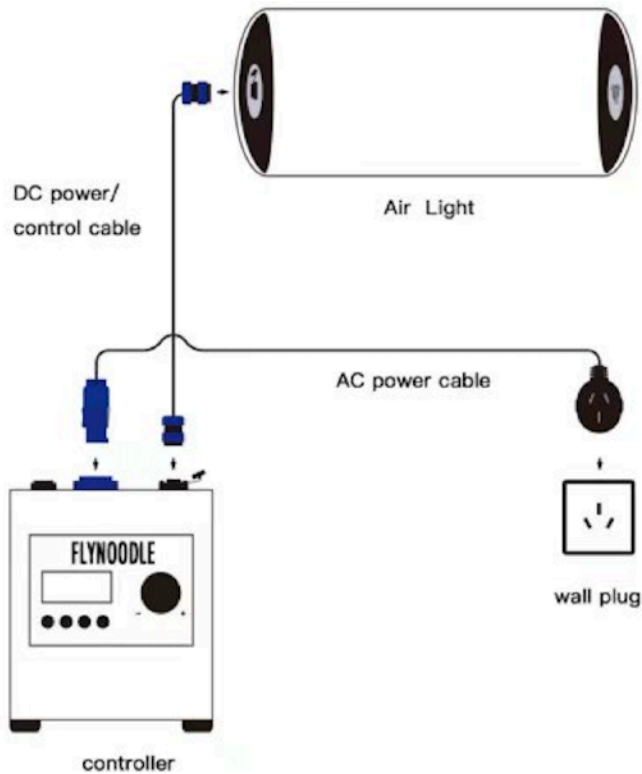

connectors & buttons



power controller

- o — power off
- I — V mount batter power mode
- II — AC power mode



head power input



 
multi-function

- press to switch between CCT and dimmer mode
- rotate to adjust levels



CCT /Dimmer control buttons

- M — CCT mode /dimmer mode
- ▼/▲ — CCT/intensity adjustment
- C — undecided



AC power input



air valve on the balloon & protection cap for air valve

Air Inflation

- 1.rotate the air valve protection cap counterclockwise
- 2.press and rotate the air valve clockwise, confirm that the air valve has popped out
- 3.plug the air nozzle into the air outlet on the pump and plug into AC power.
- 4.connect the air nozzle to the valve, align the notch and rotate the nozzle clockwise.
- 5.switch on the electrical air pump until the AirLight is fully inflated, and rotate the nozzle counterclockwise
- 6.secure the protection cap by rotating clockwise.

deflation

- 1.rotate the air valve protection cap counterclockwise.
- 2.press and rotate the air valve counterclockwise, confirm that the valve is pressed in.
- 3.plug the air nozzle into the air outlet on the pump and plug into AC power.
- 4.connect the air nozzle to the valve, align the notch and rotate the nozzle clockwise.
- 5.switch on the electrical air pump until the AirLight is fully deflated, and rotate the nozzle counterclockwise
- 6.secure the protection cap by rotating clockwise.

Tichuan International Co.,Ltd
Website: <https://www.ti-chuan.com>
Email: contact@ti-chuan.com.cn
Mobile:0086 18626302806
Address: No.29-2 Luou Road,Hudai Industry Park,
Binhu District,Wuxi city 214126

Online:
Skype: forestchina1983
QQ: 718782827
Wechat|Whatsapp: 0086 18626302806
Technical Support:
support@ti-chuan.com

